


**NCR I-9010 SYSTEM
CUSTOMER INSTALLATION INSTRUCTIONS**

I-9010

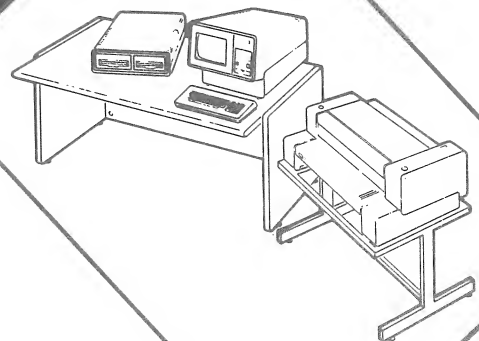

SCOPE

This publication shows pictorially how the customer can check, insert forms, connect together and switch on the various hardware units that make up the NCR I-9010 System. The first steps in operating the system are also described. These will guide the operator up to the point where the messages displayed on the CRT screen are self-explanatory.

Copyright © 1982 by NCR Corporation
Dayton, Ohio
All Rights Reserved Printed in U.S.A.


This document contains the latest information available at the time of publication. However, NCR reserves the right to modify the contents of this material at any time. Also, all features, functions, and operations described herein may not be marketed by NCR in all parts of the world. Therefore, before using this document, consult your NCR representative or NCR office for the information that is applicable and current.

To maintain the quality of our publications, we need your comments on the accuracy, clarity, organization, and value of this module.

Address correspondence to:


MIRS Central Library
NCR Corporation
101 West Schantz Avenue
Dayton, Ohio 45479
U.S.A.

NCR I-9010 SYSTEM

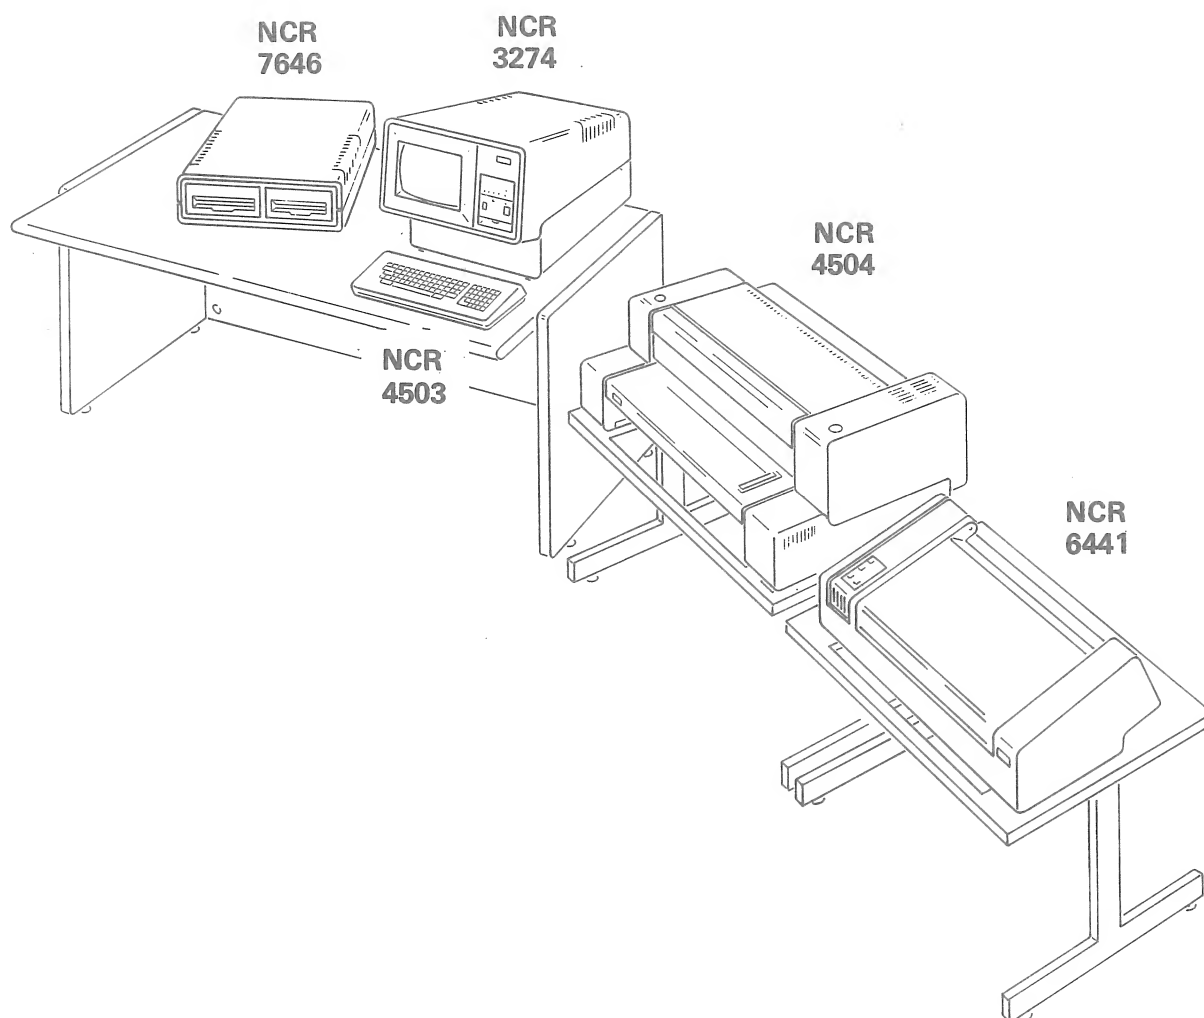


Copyright © 1982 by NCR Corporation
Dayton, Ohio
All Rights Reserved Printed in U.S.A.


**NCR 3274
PROCESSOR**

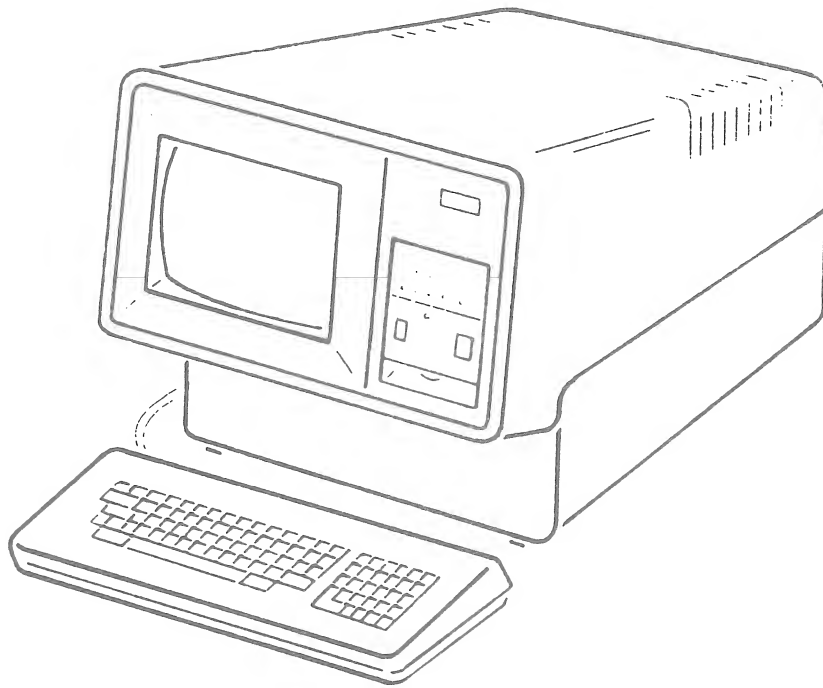


1

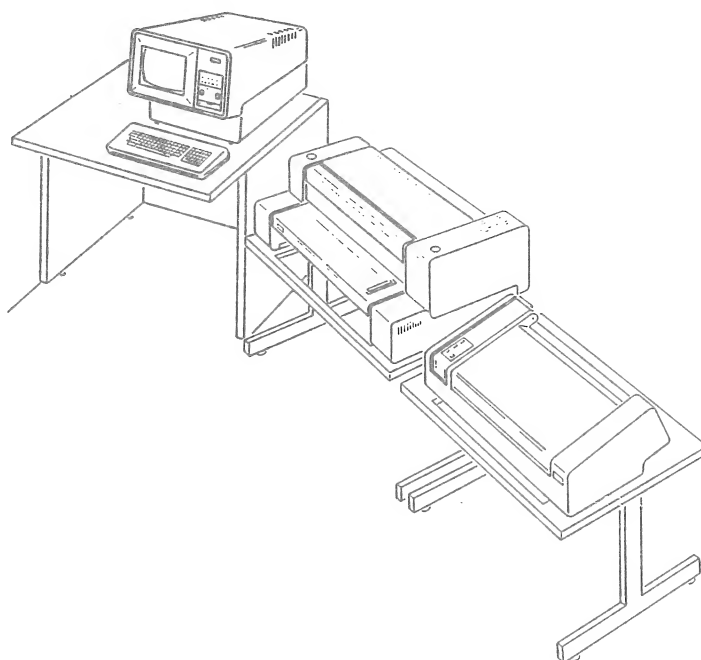


2

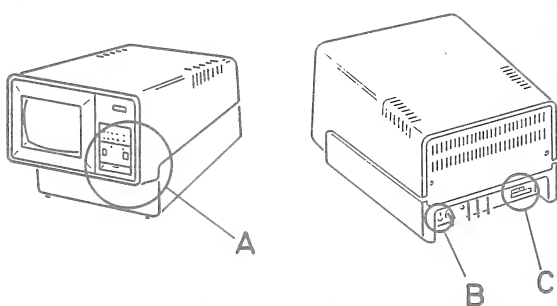


A

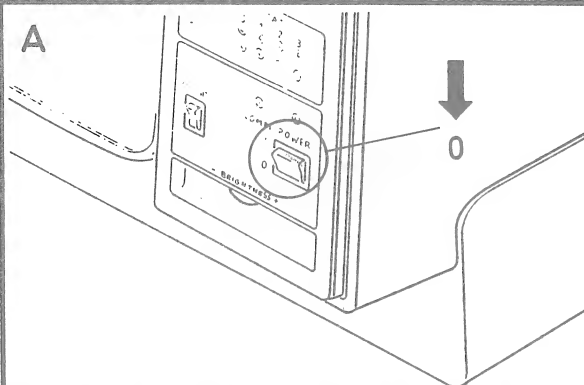


B

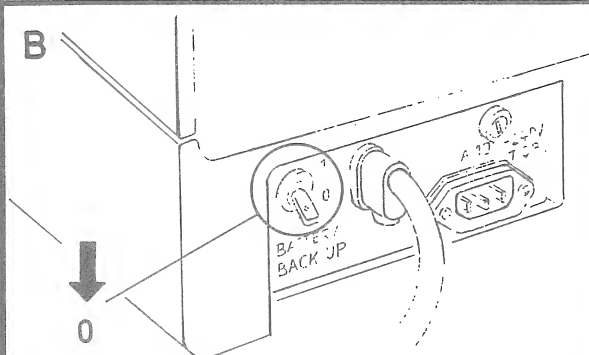


C

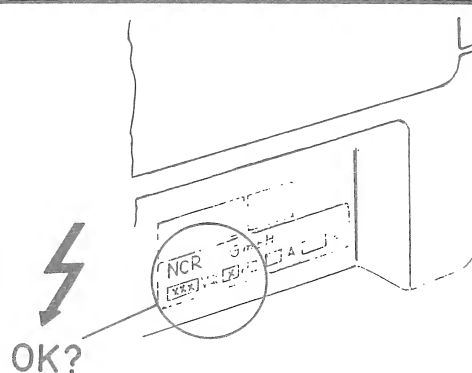


**NCR 4504
VISUAL RECORD PRINTER**

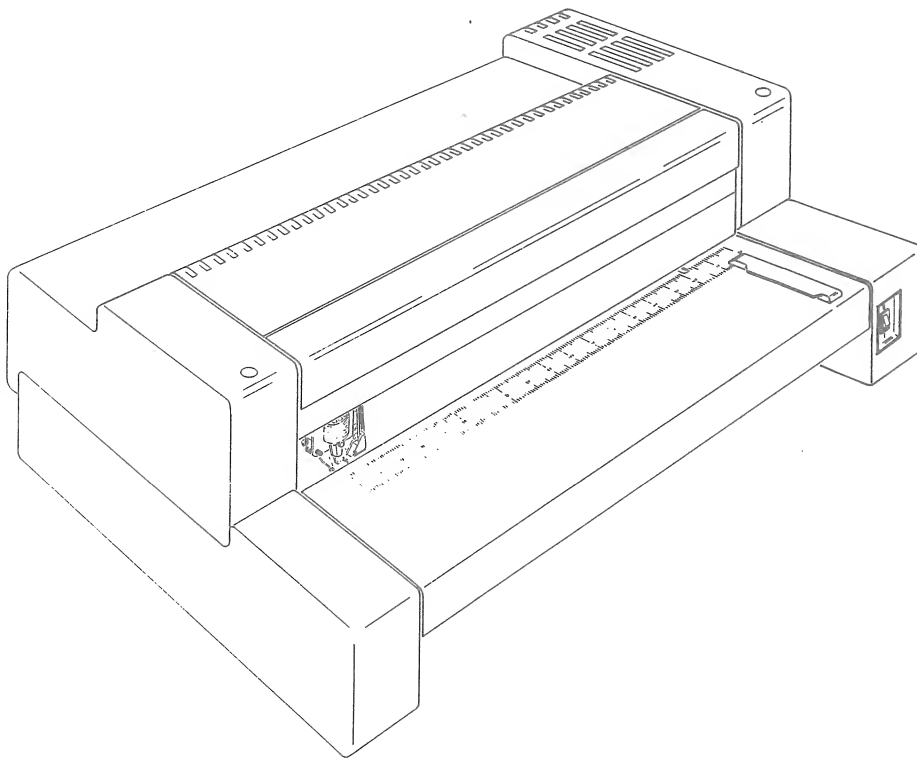


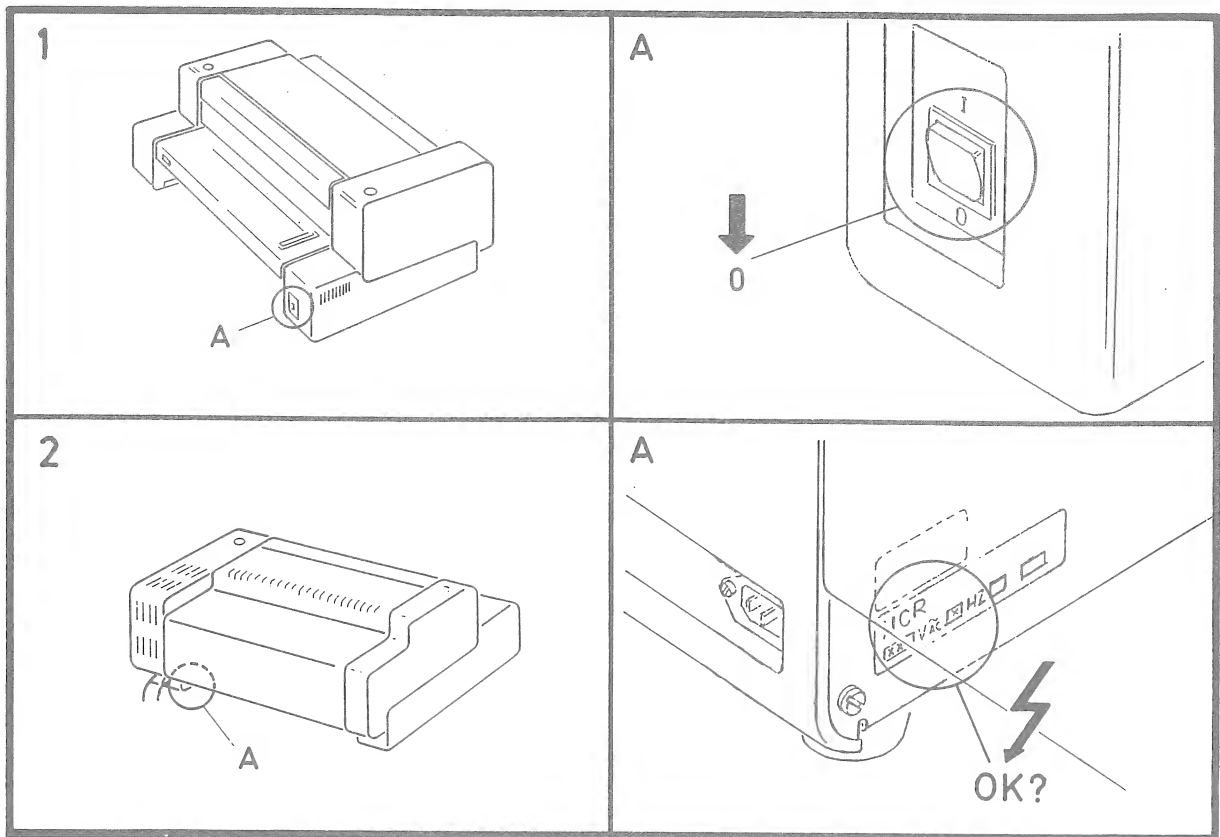


3

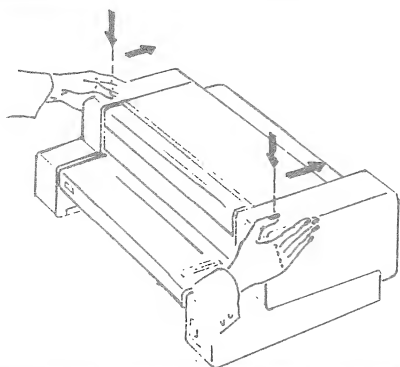


4

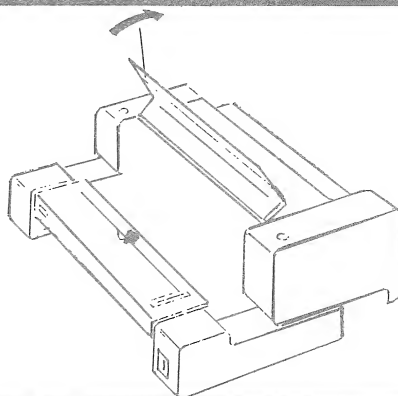

5

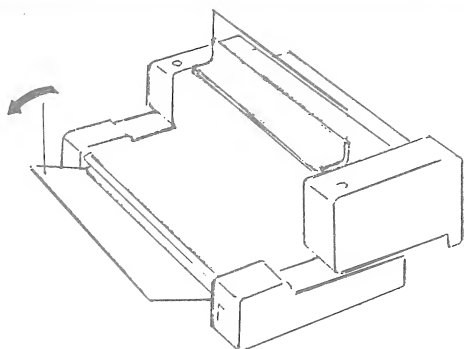


6

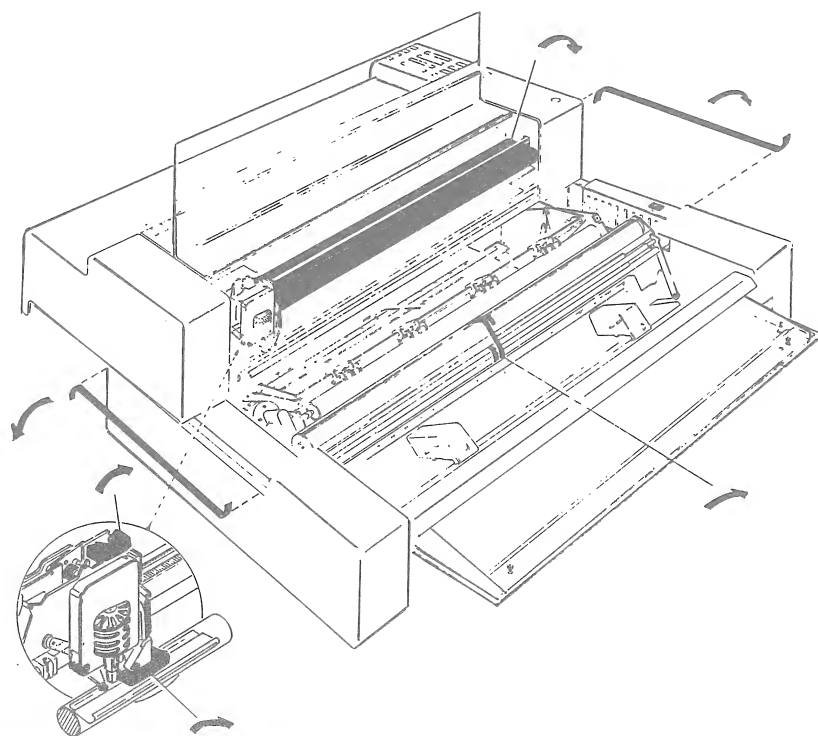


FORMS INSTALLATION


7

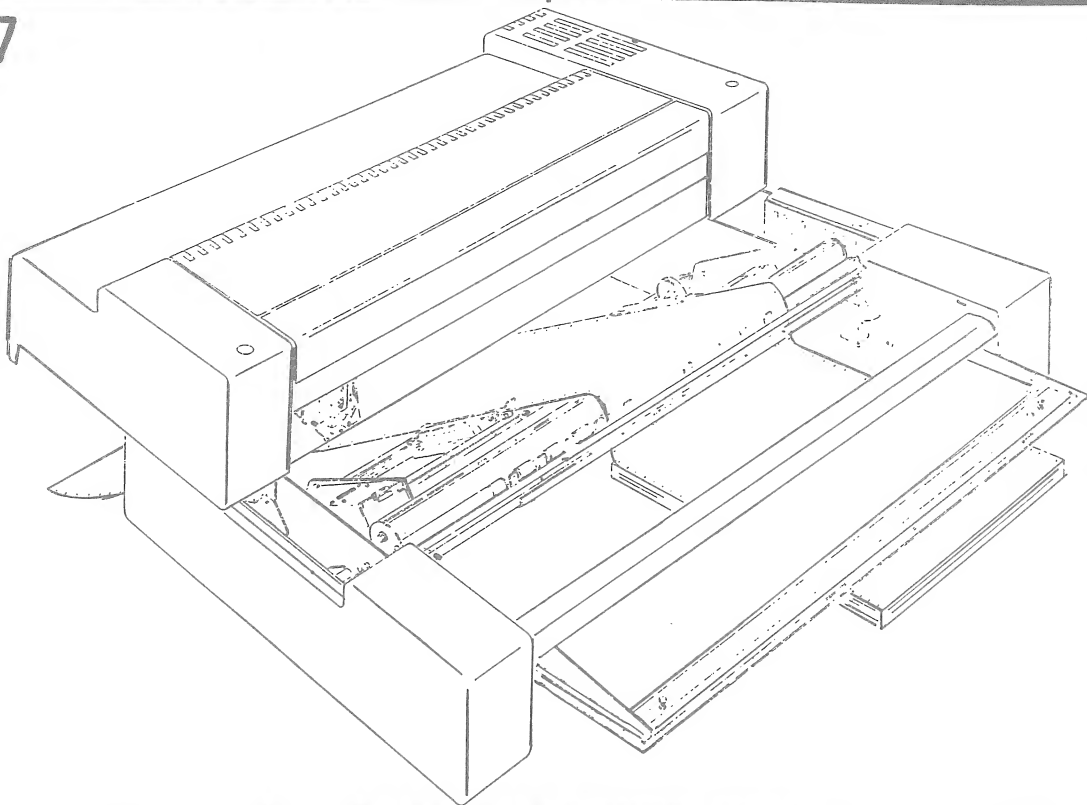


8

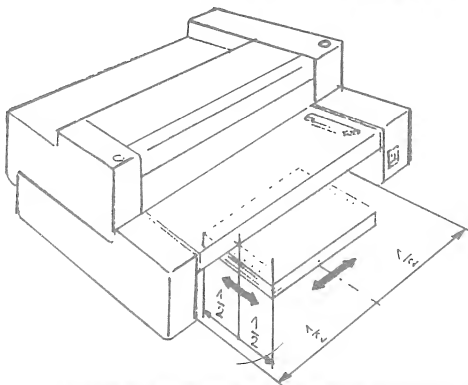


9

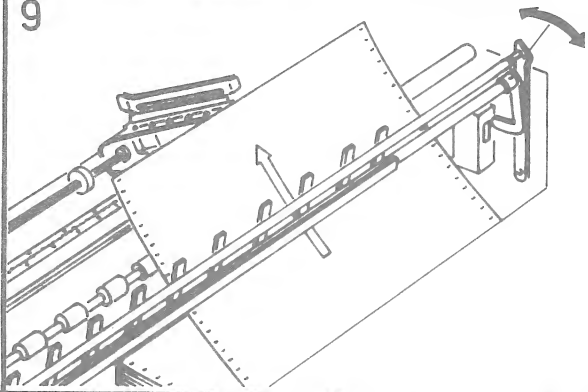


10

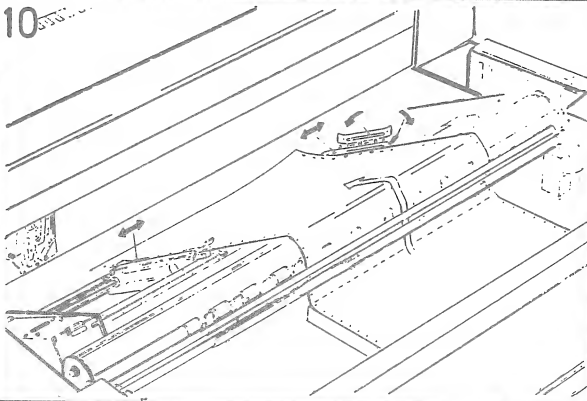


11

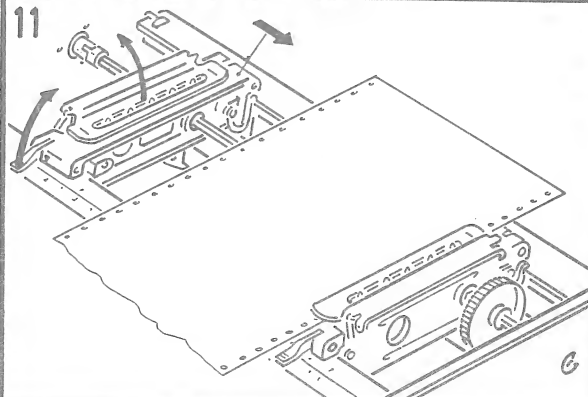


12

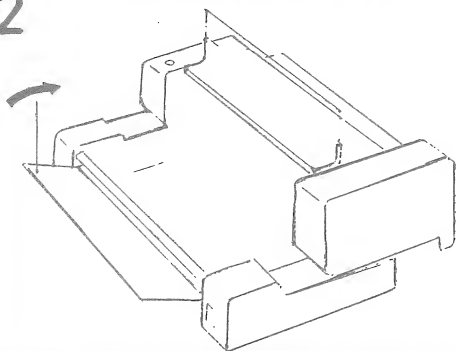


13

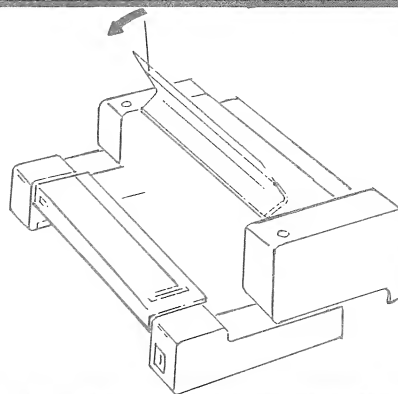



14

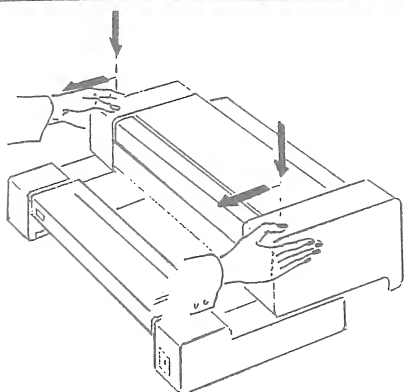

**NCR 6441
MATRIX CHARACTER PRINTER**

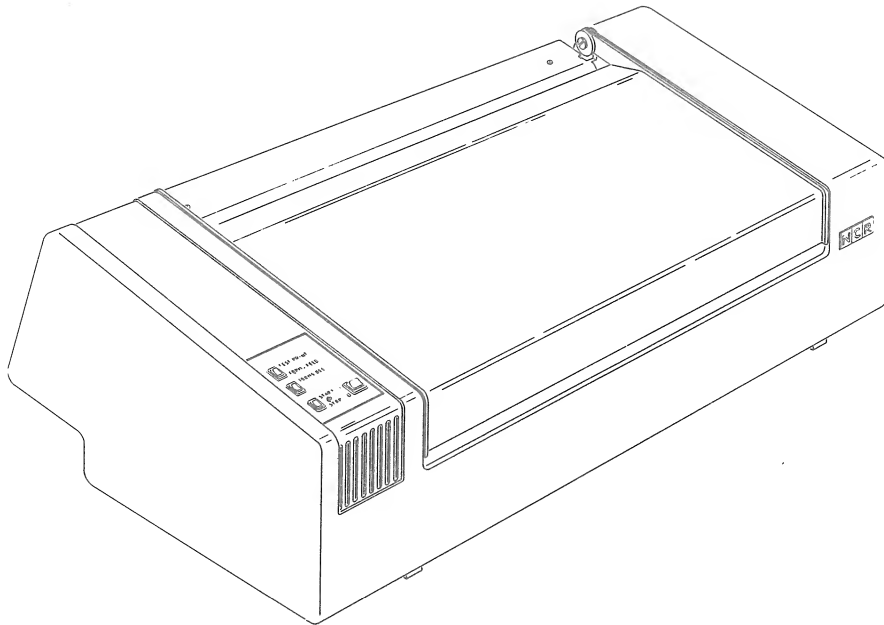


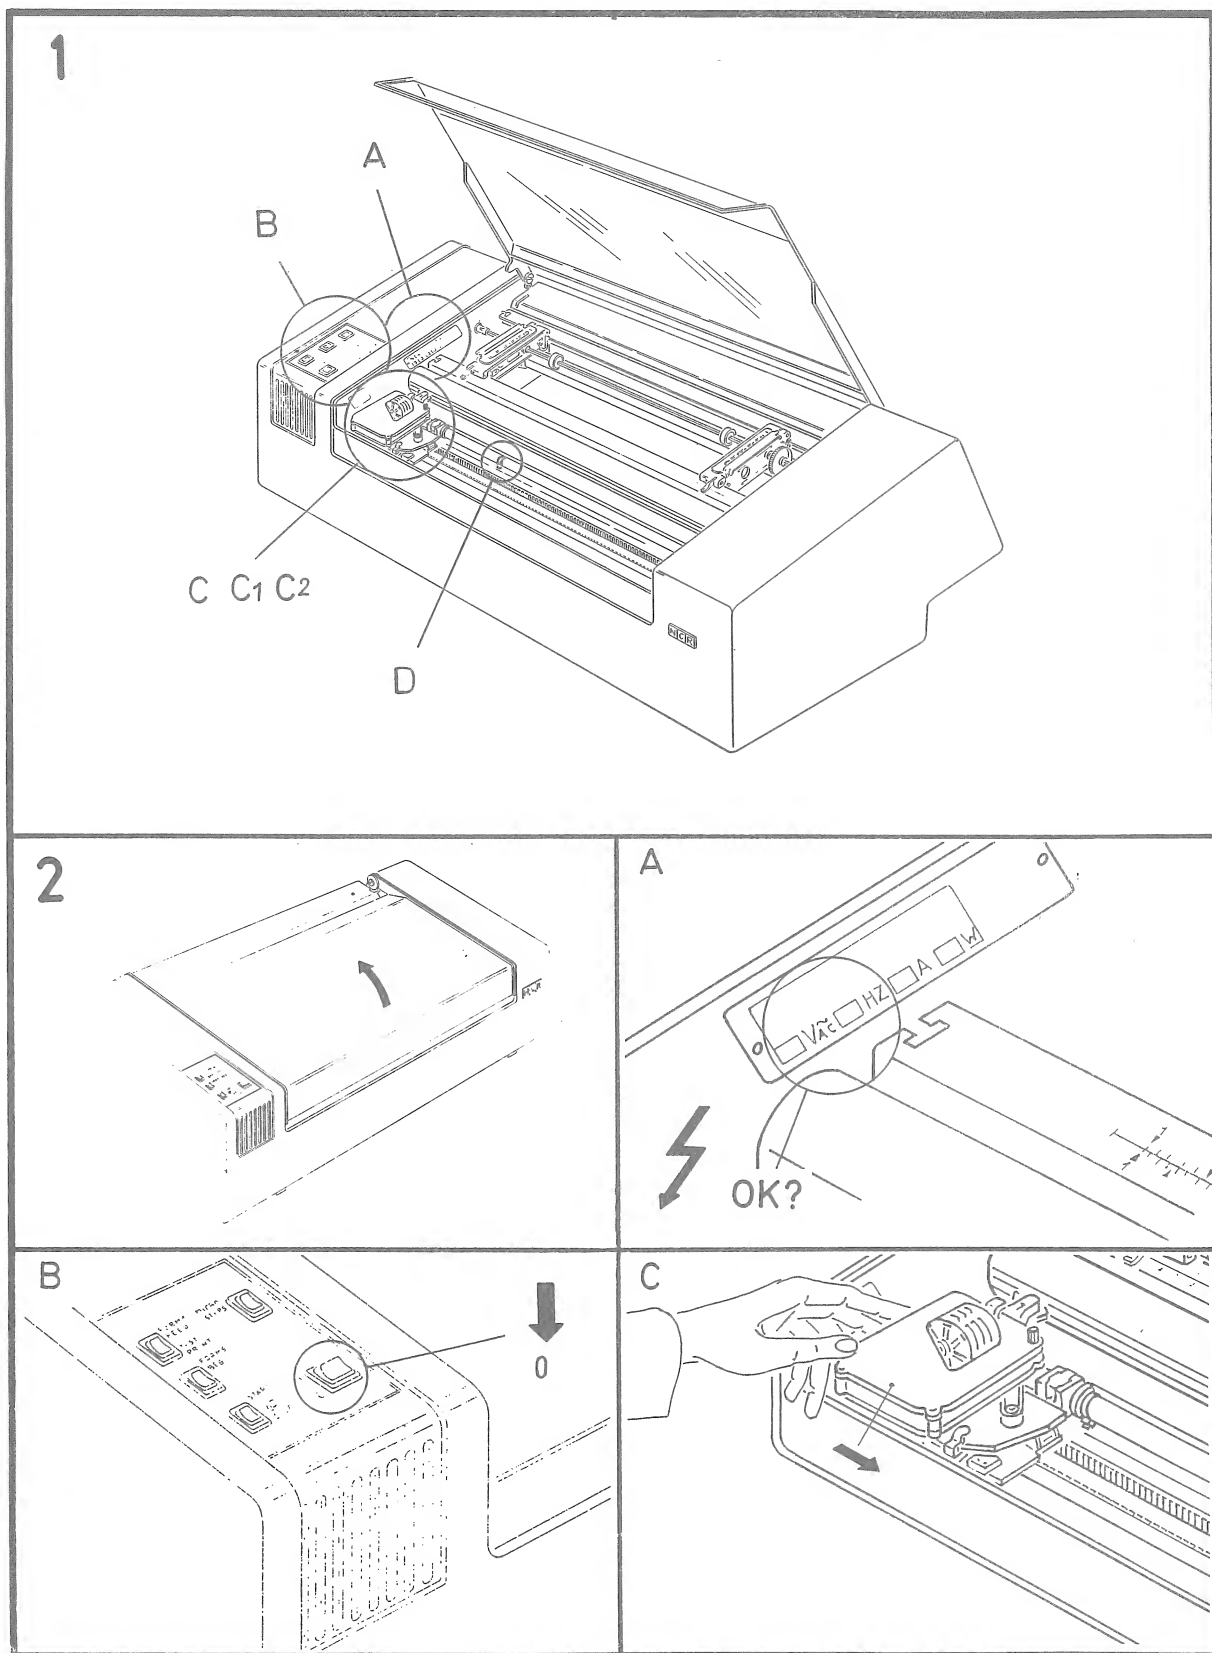

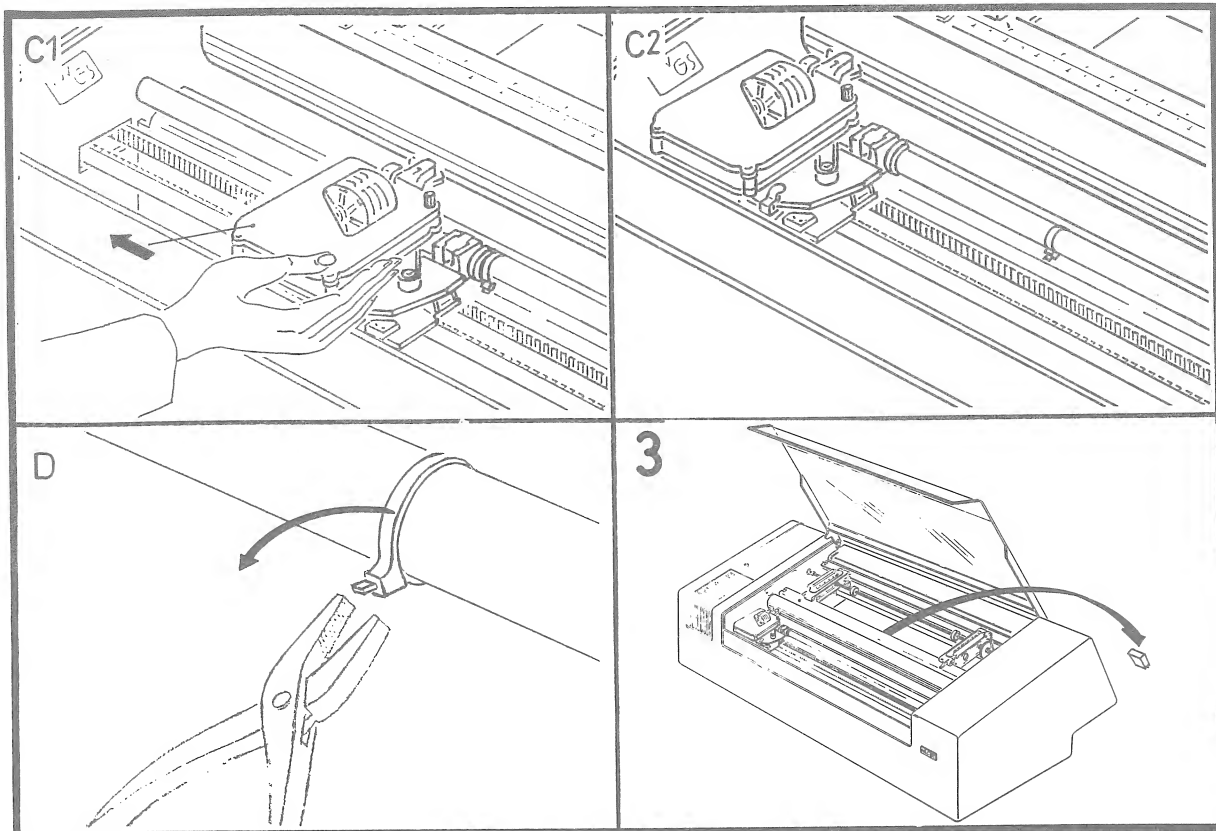


FORMS INSTALLATION


4

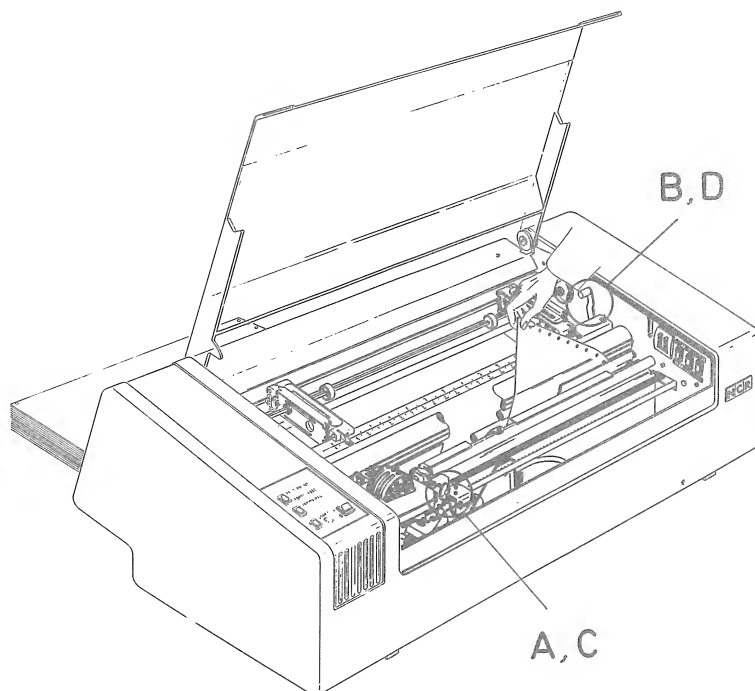


5

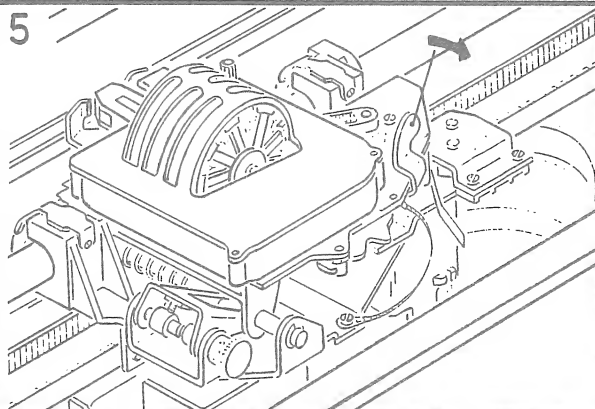


6




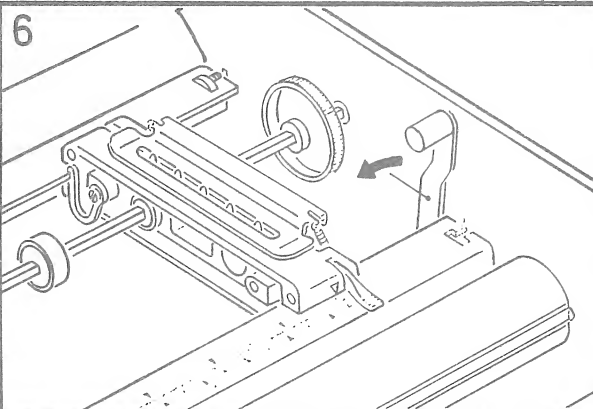


7

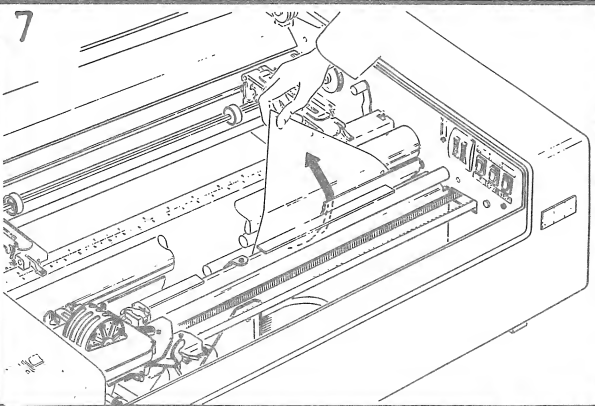


8

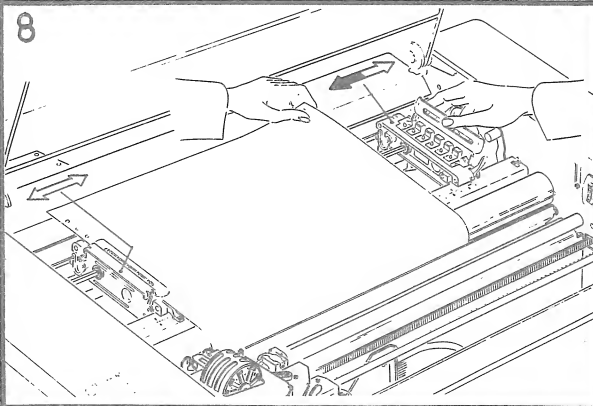


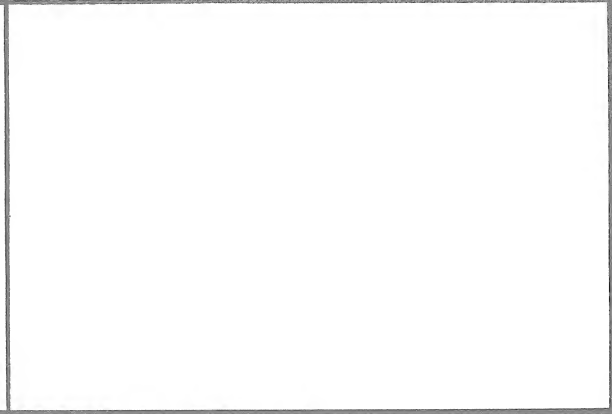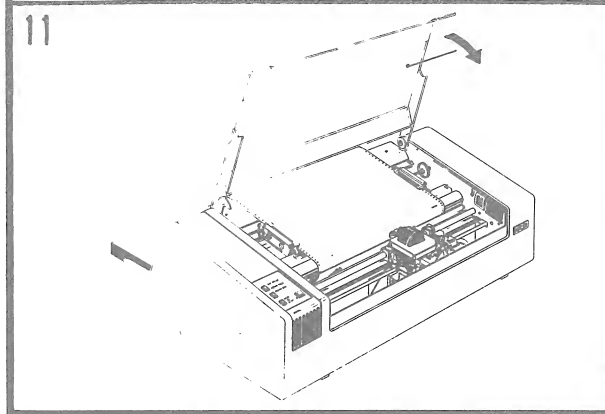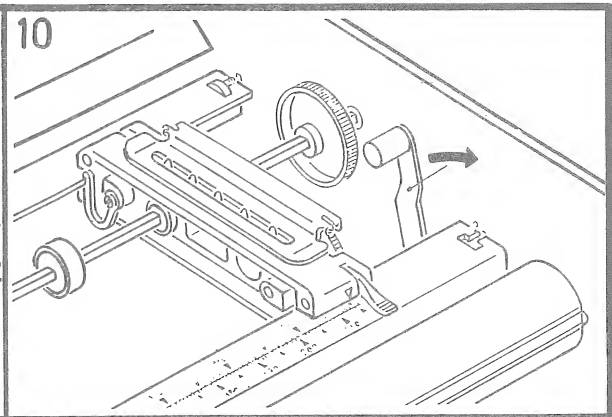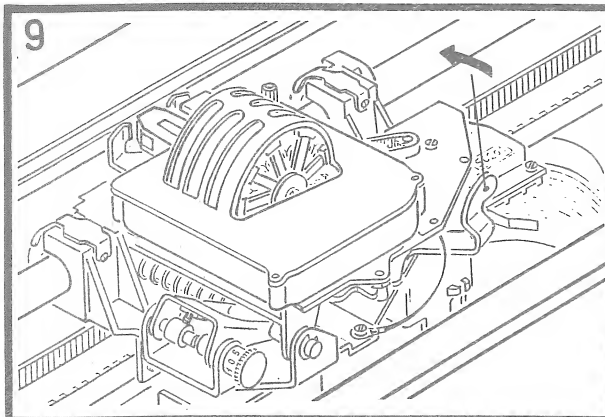


**NCR 4503
KEYBOARD**

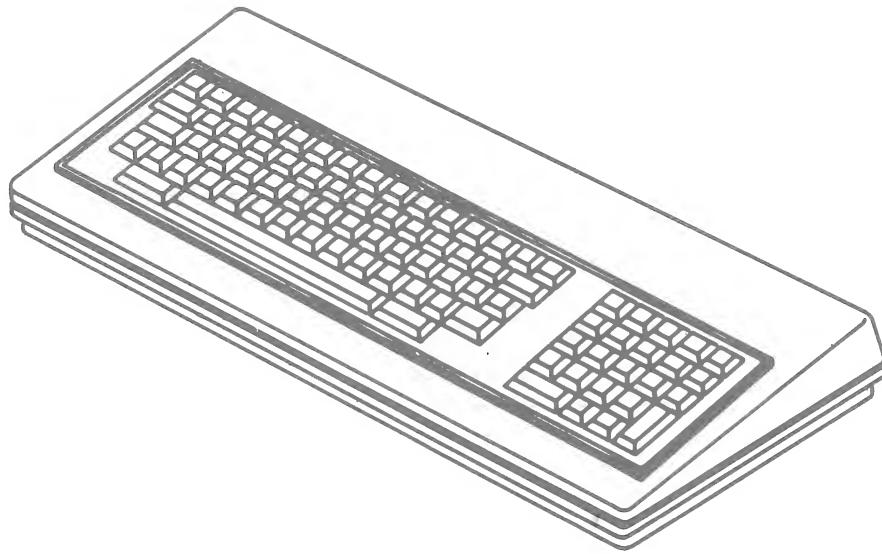


1

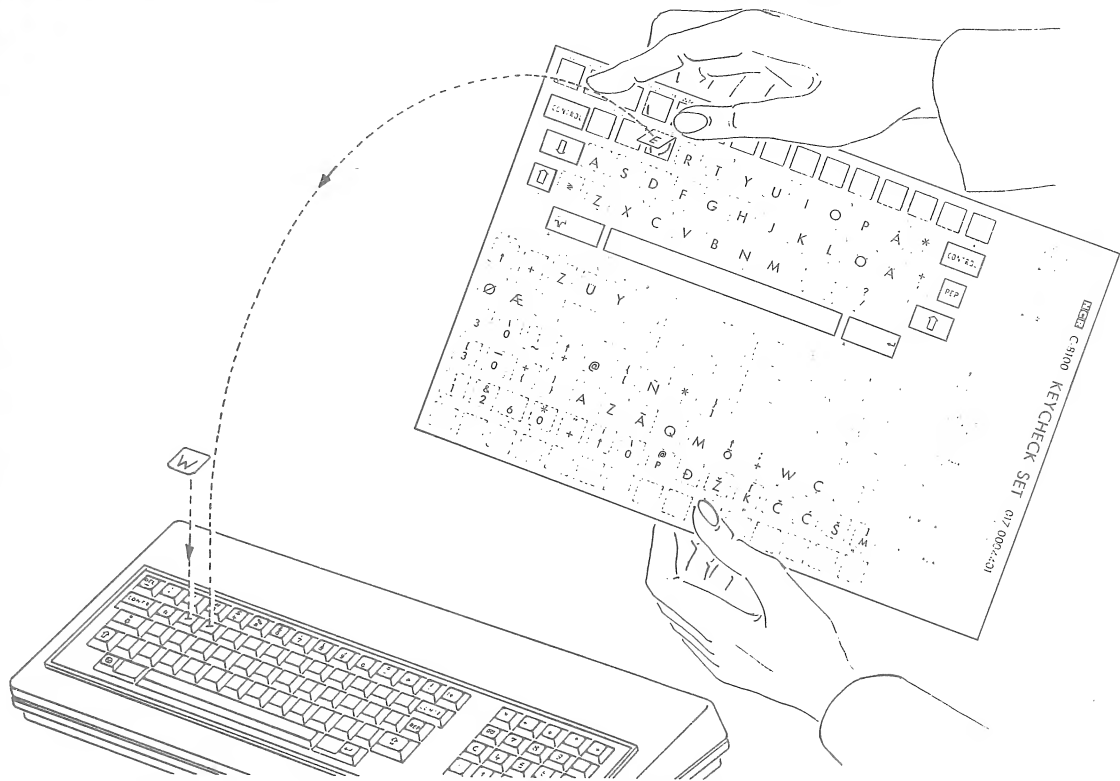


2

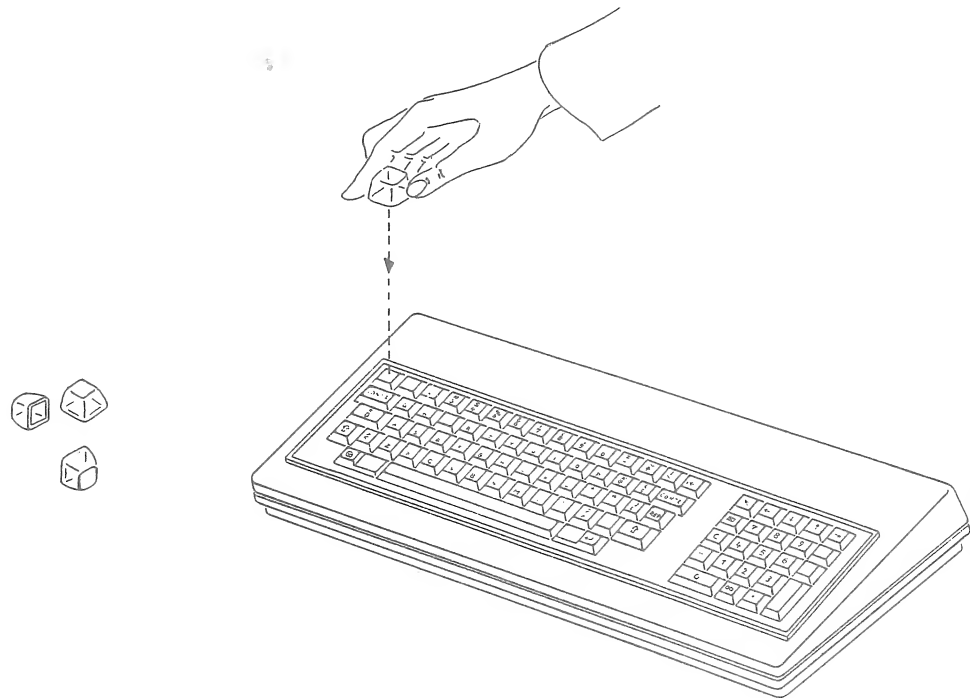


NCR I-9010 SYSTEM UNIT CONNECTION

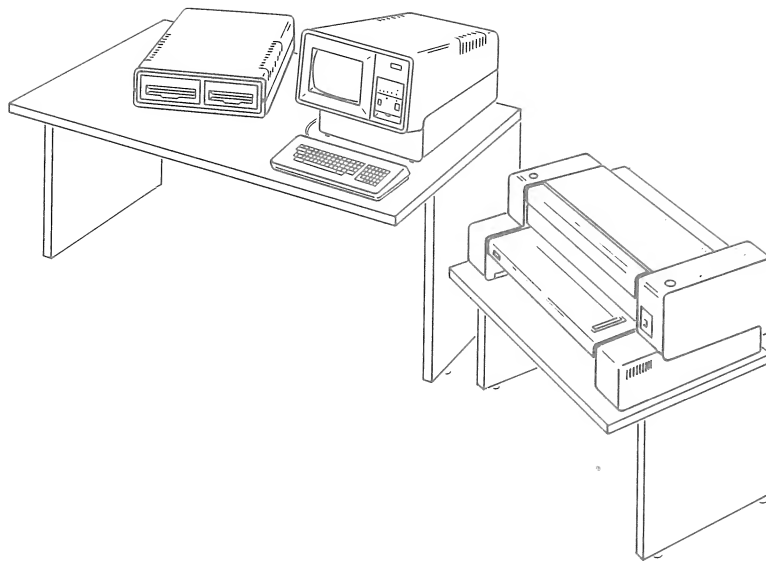


1

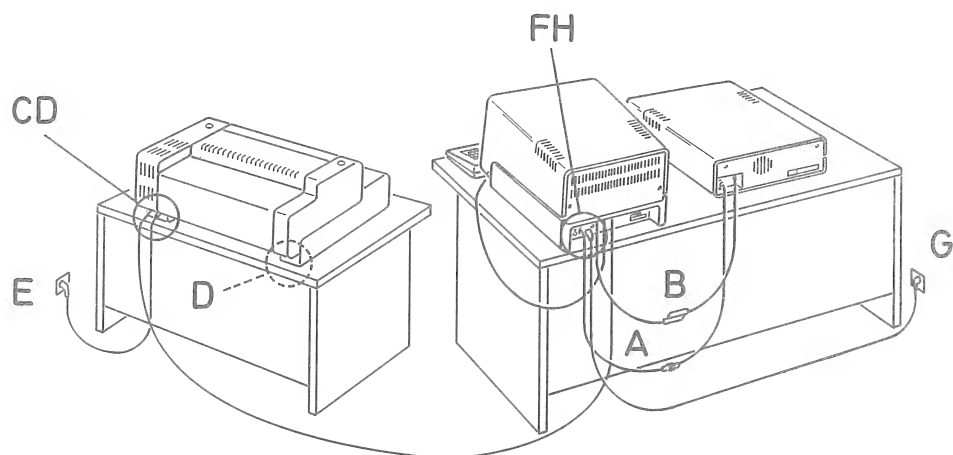


A

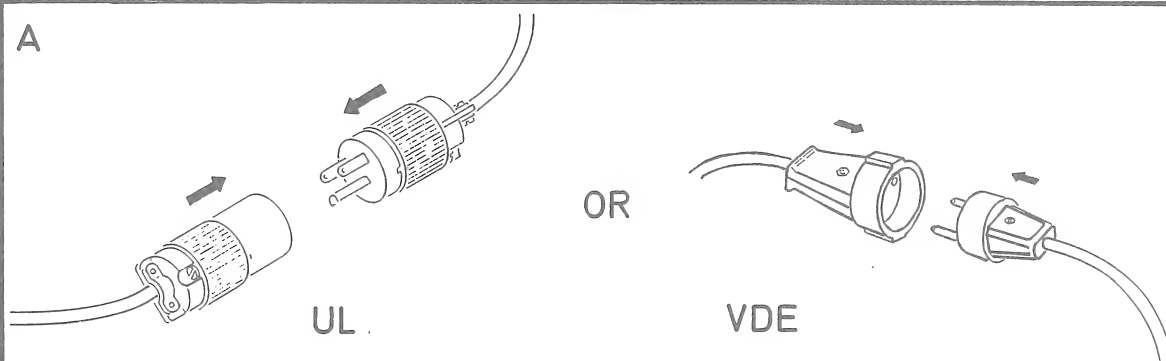


B

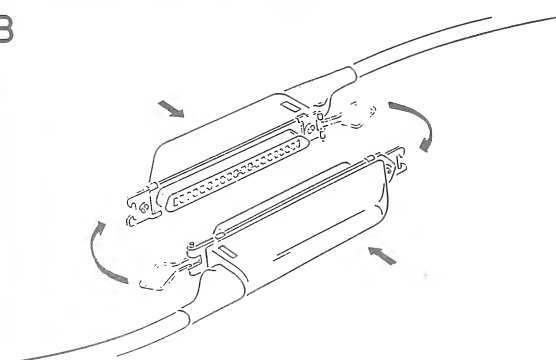


C

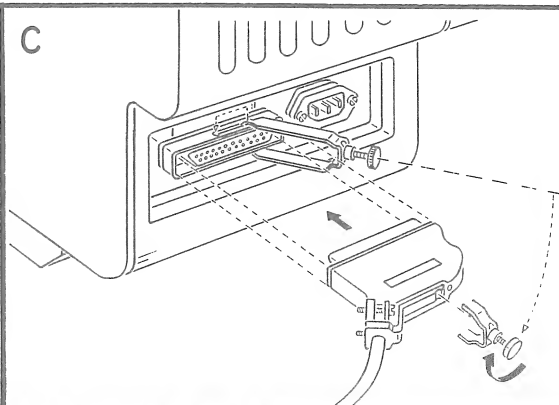


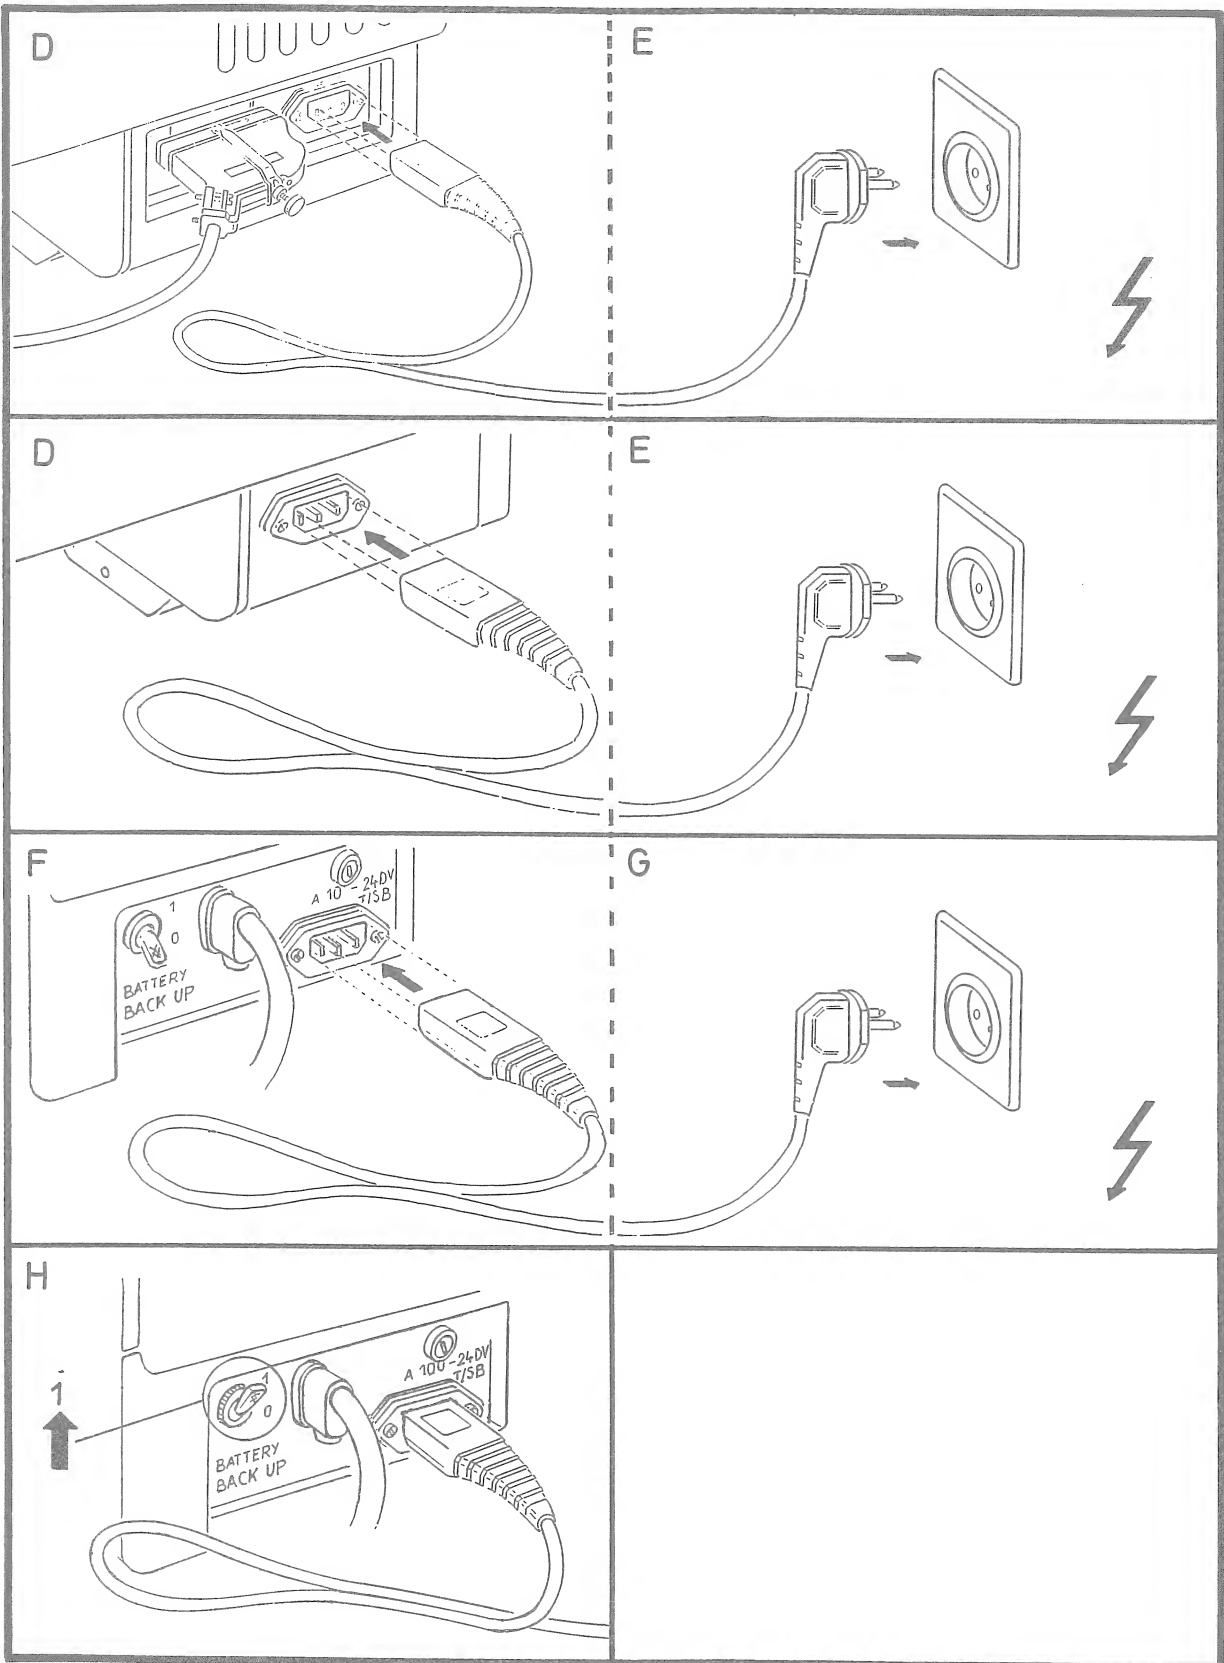


POWER ON

1

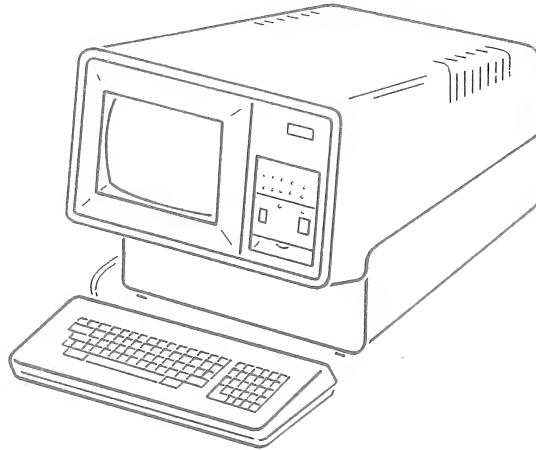


2

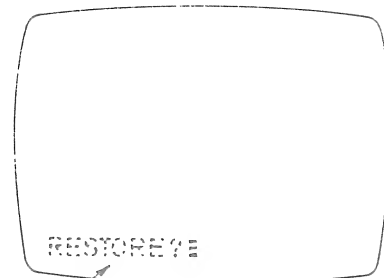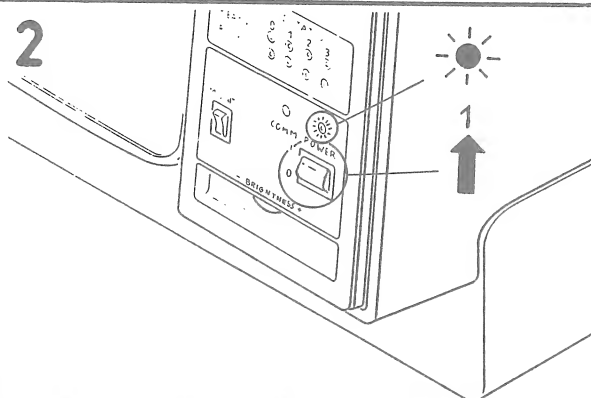


RESTORE? ■ OK?



3

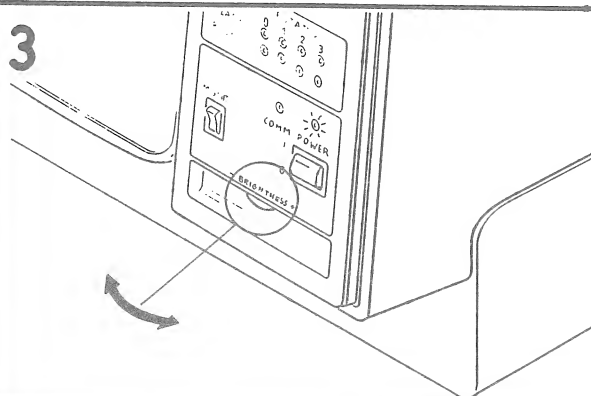


**NCR 7646
FLEXIBLE DISK RECORDER**

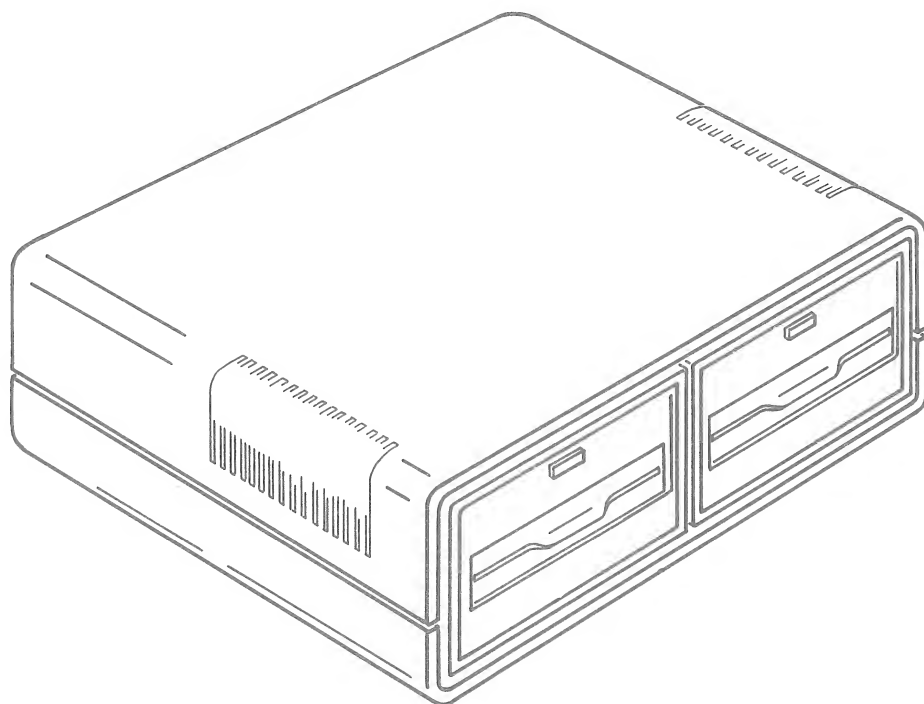


1

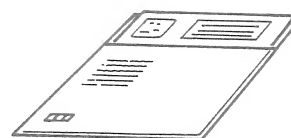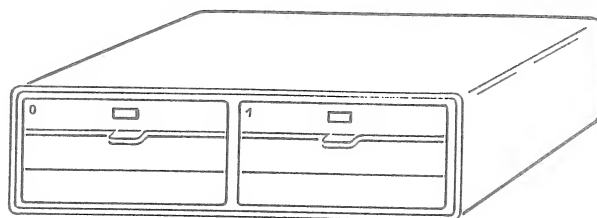


2

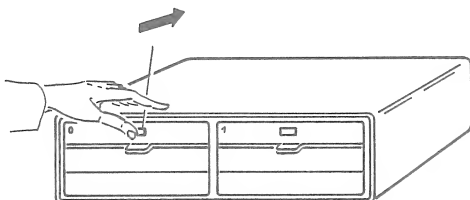


3

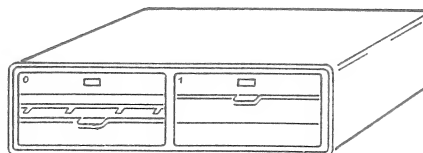


4

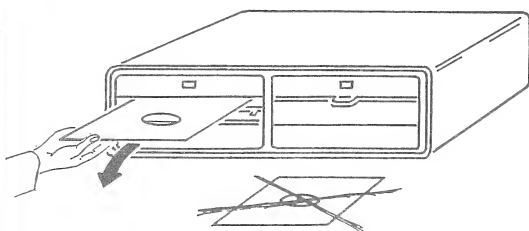


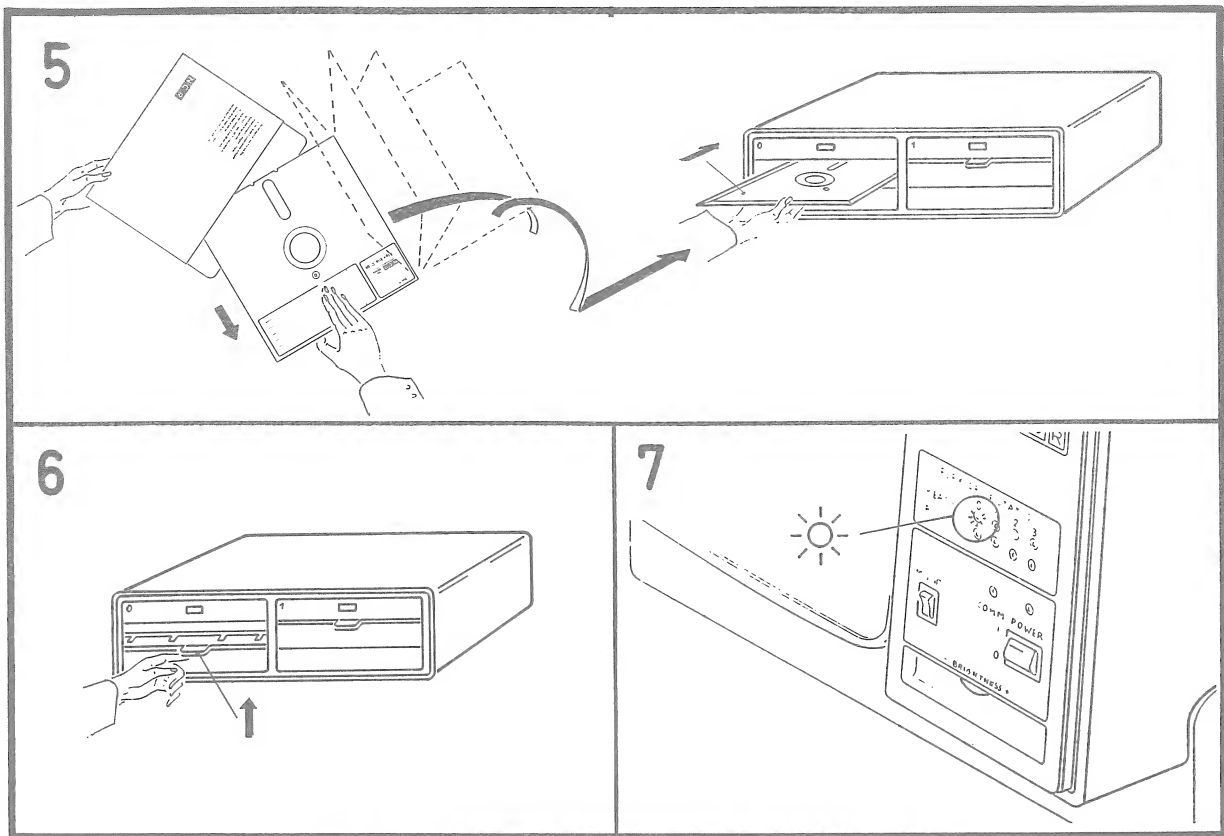

NCR I-9010 SYSTEM OPERATION

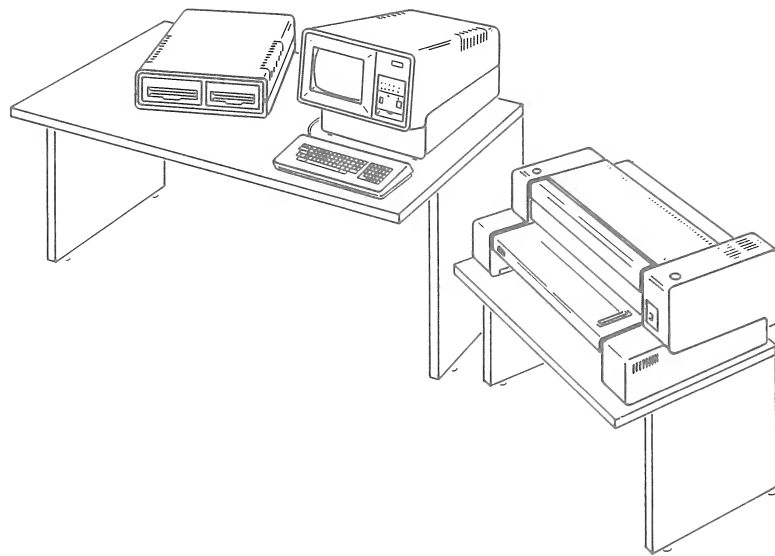


1

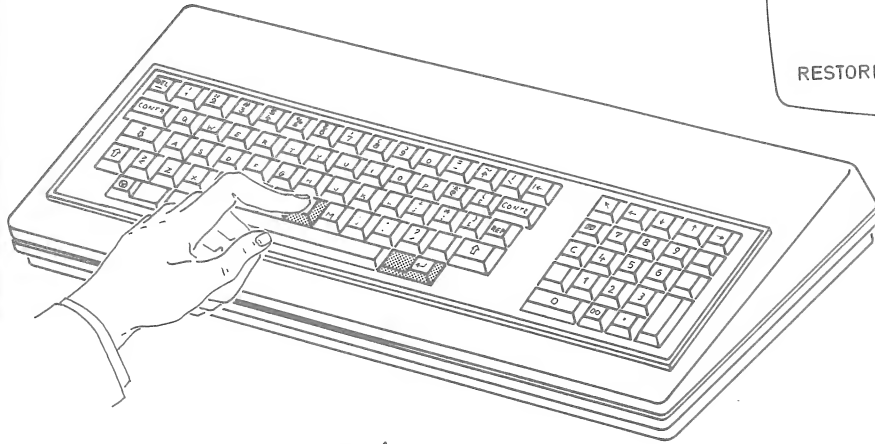

RESTORE ?




2

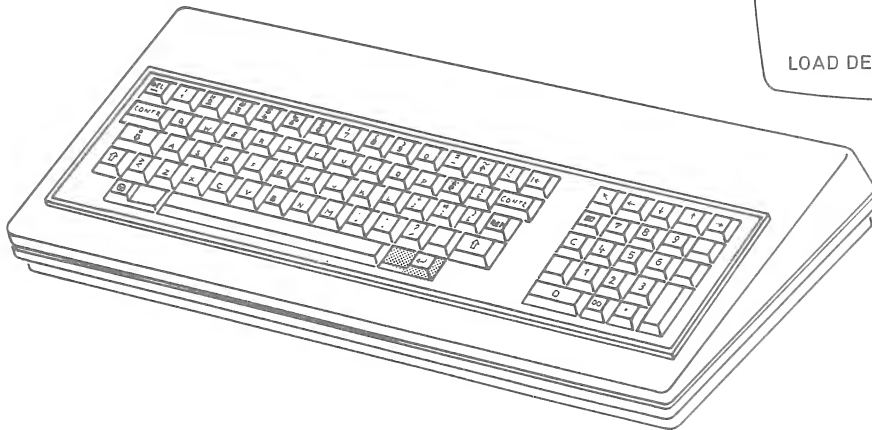

LOAD DEVICE ?



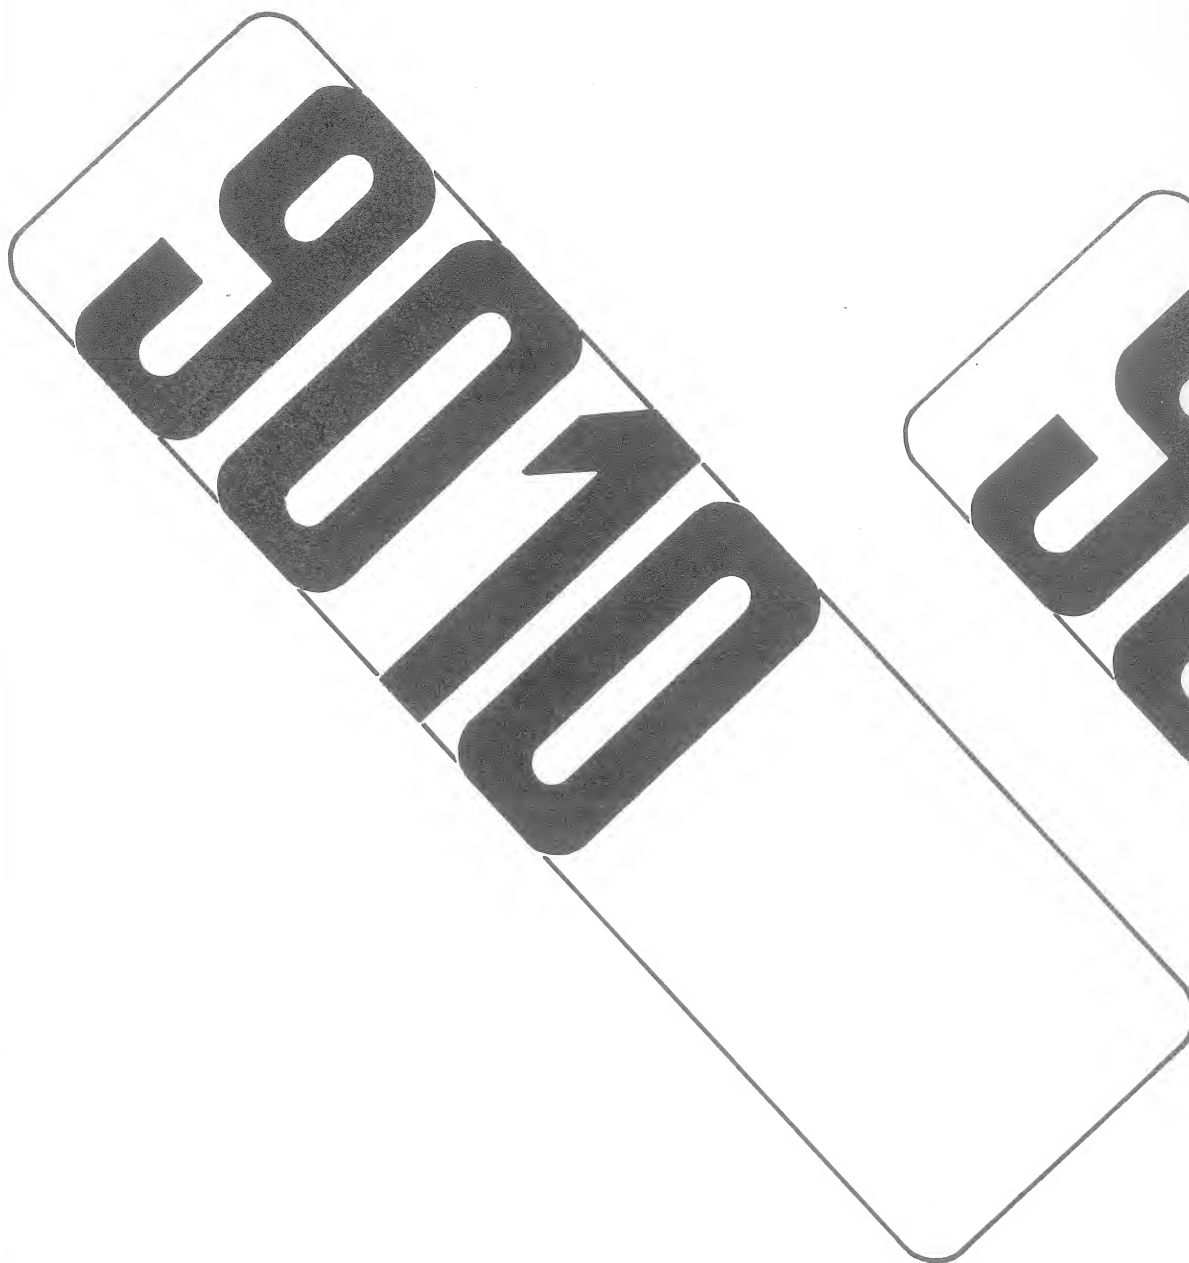

NCR

NCR Corporation
Dayton, Ohio 45479

ST-2102-10 0182

(017-0025602 Rev B)